


PO tapón p/extremo conector

Dimensiones para el montaje

Modelo	T Tubo OD	ET (MM)
PO 1-0-	1/8	11.1
PO 2-0-	1/4	14.3
PO 3-0-	3/8	17.3
PO 4-0-	1/2	22.2
PO 5-0-	5/8	25.4
PO 6-0-	3/4	28.6
PO 8-0-	1	38.1


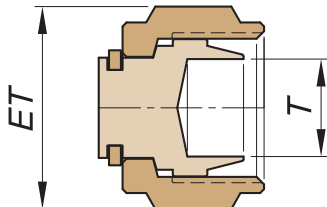


Atención: No es necesario el ajuste de 1 1/4 de vuelta. Ajustar sólo 1/4 de vuelta desde el ajuste a mano.

PA tapa p/extremo de tubo

Dimensiones para el montaje

Modelo	T Tubo OD	DIMENSIONES (MM)			
		A	E	ET	N
PA 1-0-	1/8	23.0	11.1	11.1	15.0
PA 2-0-	1/4	25.2	14.3	14.3	17.0
PA 3-0-	3/8	29.1	17.3	17.3	20.0
PA 4-0-	1/2	32.0	22.2	22.2	20.0
PA 5-0-	5/8	33.7	25.4	25.4	23.0
PA 6-0-	3/4	34.9	28.6	28.6	23.5
PA 8-0-	1	44.6	38.1	38.1	31.0

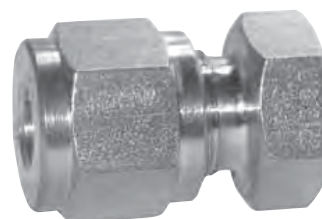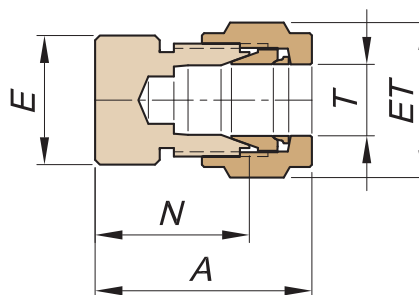

CONTÁCTANOS

 Lautaro 2083 2097
Lote 5, Concepción

 ventas@wenganindustrial.cl

 +56 9 8731 4484

 www.wenganindustrial.cl